

H2 HØRETELEFONER

TÆND/SLUK: hold ① nede i 2 sek

KANALSKIFT: tryk ①

-  1 - BLÅ
-  2 - RØD
-  3 - GRØN
-  4 - GUL
-  5 - LILLA

VOLUMEN: skub ② op eller ned til den ønskede volumen er nået

LYS SLUK/TÆND: tryk ② og hold nede i 2 sek indtil høretelefonerne blinker

AUTOMATISK/MANUEL KANALSKIFT:

automatisk = ③ lyser blå: ved kanalskift finder høretelefonerne automatisk den næste kanal som er i brug

manuelt = ③ lyser grønt: ved kanalskift hopper høretelefonerne fra kanal 1 til 2 til 3 til 4 til 5, uanset om kanalen er i brug eller ej

SKIFT MELLE M AUTOMATISK/MANUEL KANALSKIFT:


1. Sluk høretelefonen
2. Hold ① nede i 7 sek indtil ③ skifter farve

BATTERITID: min 8 timer

LADETID: op til 4 timer (③ lyser rød under opladning)

RENGØRING:

- brug en opvredet mikrofiberklud med sæbevand
- sprit evt. af med mild overfladedesinfektion

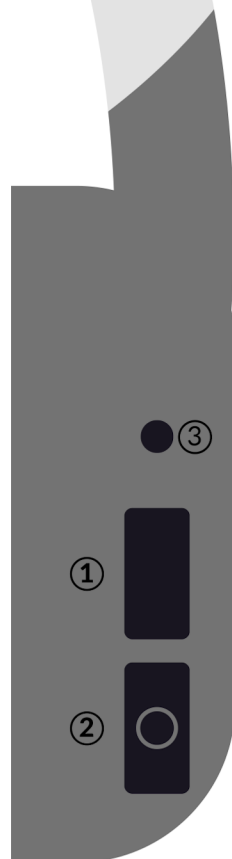

H2 HEADPHONES



ON/OFF: hold ① for 2 sec

SWITCHING CHANNEL: press ①

- 1 - BLUE
- 2 - RED
- 3 - GREEN
- 4 - YELLOW
- 5 - PURPLE

VOLUME: slide ② up or down and hold until desired volume is reached

LIGHT ON/OFF: press ② and hold for 2 sec until the headphones flash

AUTOMATIC/MANUAL CHANNEL SWITCH:

automatic = ③ lights up blue: when switching channel the headphones automatically jump to the next active channel

manual = ③ lights up green: when switching channel the headphones go from channel 1 to 2 to 3 to 4 to 5, also when the next channel is not in use

SWITCH BETWEEN AUTOMATIC/MANUAL:

1. Turn the headphones off
2. Hold ① for 7 sec until ③ changes color

BATTERY: min 8 hours

CHARGE TIME: up to 4 hours (③ is red while charging)

CLEANING:

- dip a cloth in soap water, wring it properly before wiping the headphones
- wipe with a mild surface disinfectant

