


# MS3-1 TRÅDLØS MIKROFON

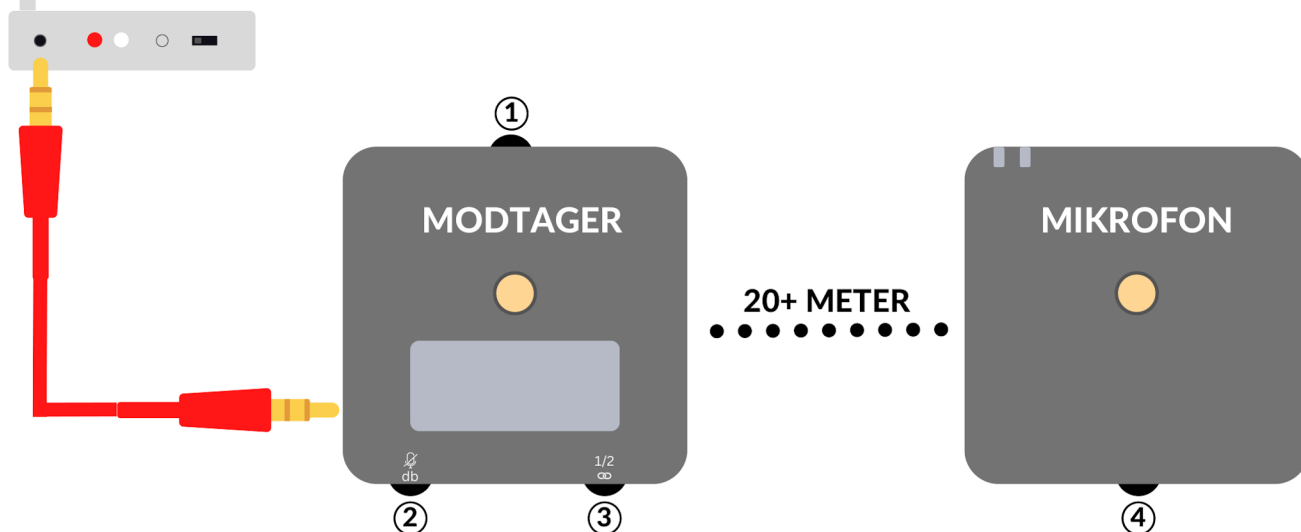

Da flere indstillinger i mikrofonsystemet ikke passer med Silent udstyret, har vi åbnet æsken og programmeret systemet korrekt til dig (Mode: "Merged", Gain Mode: "Coarse"). Du kan ændre indstillingerne via Røde Central softwaren:

[www.rote.com/microphones/wireless/wirelessgoii](http://www.rote.com/microphones/wireless/wirelessgoii)

**SÆT MS3-1 TIL MT2/MT3 TRANSMITTER:** forbind **modtageren** og "Mic" indgangen på transmitteren med det røde minijack kabel

**TÆND/SLUK:** hold henholdsvis ① og ④ nede i 5 sek

**MUTE/UNMUTE VIA MIKROFONEN:** tryk ④


**MUTE/UNMUTE VIA MODTAGEREN:** tryk ③ for at vælge mikrofonen, og tryk ② kort efterfølgende

## **JUSTER BALANCEN MELLEEM STEMME OG MUSIK:**

1. Skru volumen på dine egne høretelefoner helt op
2. Sæt volumen på afspilleren til ønskede max niveau
3. Tal i mikrofonen og juster niveauet ved at:
  - a. flytte mikrofonens afstand til munden
  - b. tryk ② for at justere mikrofonens 'gain'
4. Juster volumen på dine høretelefoner tilbage til et behageligt niveau

**BATTERITID:** op til 7 timer

# MS3-1 WIRELESS MICROPHONE

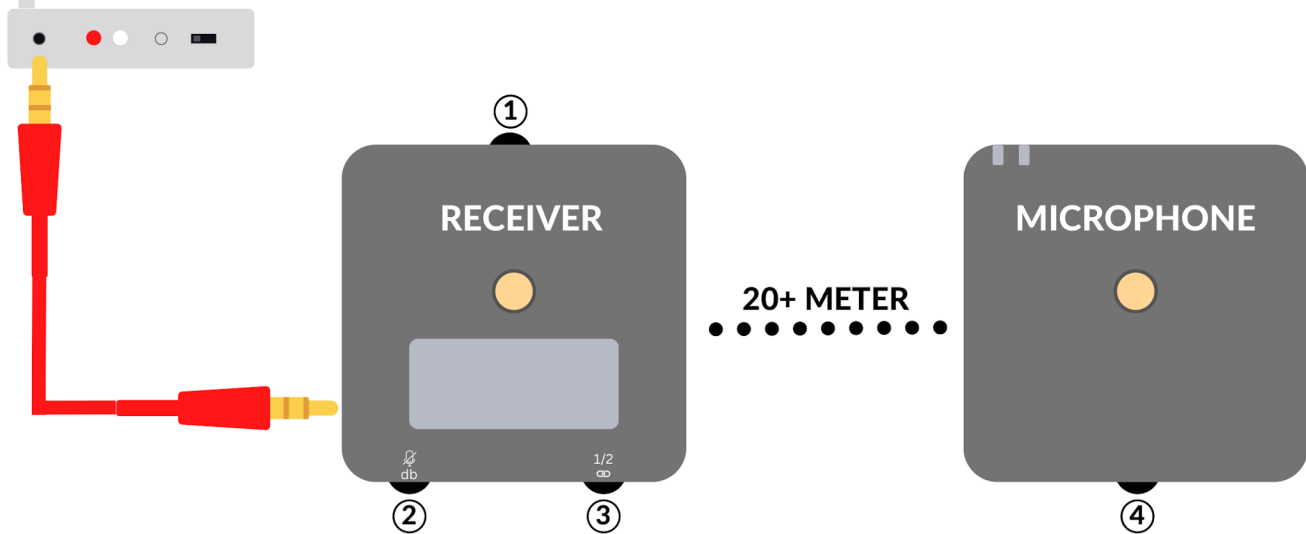

We have opened the box and programmed the system correctly for you (Mode: "Merged", Gain Mode: "Coarse"), as multiple of the default settings don't match with the Silent gear. You can change the settings via the Røde Central software:

[www.ode.com/microphones/wireless/wirelessgoii](http://www.ode.com/microphones/wireless/wirelessgoii)

**CONNECT MS3-1 TO MT2/MT3 TRANSMITTER:** plug the short red cable in the minijack output on the **receiver** and the "Mic" input on the transmitter

**ON/OFF:** hold ① and ④ for respectively 5 sec

**MUTE/UNMUTE VIA THE MICROPHONE:** press ④

**MUTE/UNMUTE VIA THE RECEIVER:** press ③ to select the microphone, and press ② shortly afterwards

## ADJUST BALANCE BETWEEN VOICE AND MUSIC:

1. Turn the volume on your headphones all the way up
2. Adjust volume on the playback device to the desired max level
3. Speak into the microphone and adjust the level of the voice by
  - a. changing the distance of the microphone to your mouth
  - b. press ② to adjust the microphone's gain
4. Adjust the volume on your headphones back to a comfortable level

**BATTERY:** up to 7 timer