


# MT1 TRANSMITTER

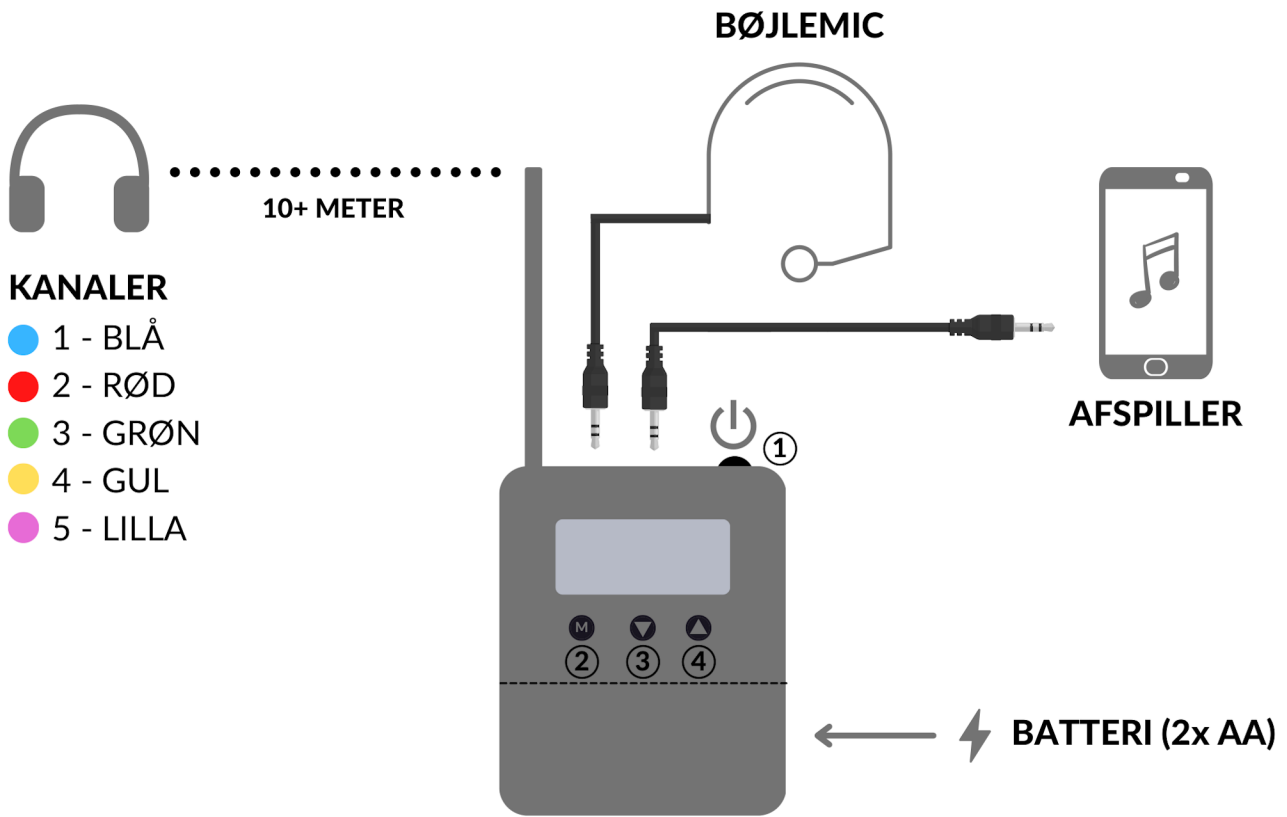

**ON/OFF:** hold ① nede i 2 sek

## **KANALSKIFT:**

1. hold ② nede i 2 sek
2. tryk ③/④ for at vælge kanal 1 til 5
3. tryk ② for at bekræfte dit valg

**MUTE/UNMUTE MIKROFONEN:** tryk ①


## **JUSTER MUSIK VOLUMEN:**

1. hold ② nede i 2 sek
2. tryk ② en gang; displayet viser "RLL" (for audio)
3. tryk ③/④ for at vælge den ønskede volumen
4. tryk 2 for at bekræfte dit valg

## **JUSTER MIKROFON VOLUMEN:**

1. hold ② nede i 2 sek
2. tryk ② to gange; displayet viser "LLR" (for voice)
3. tryk ③/④ for at vælge den ønskede volumen
4. tryk 2 for at bekræfte dit valg

# MT1 TRANSMITTER

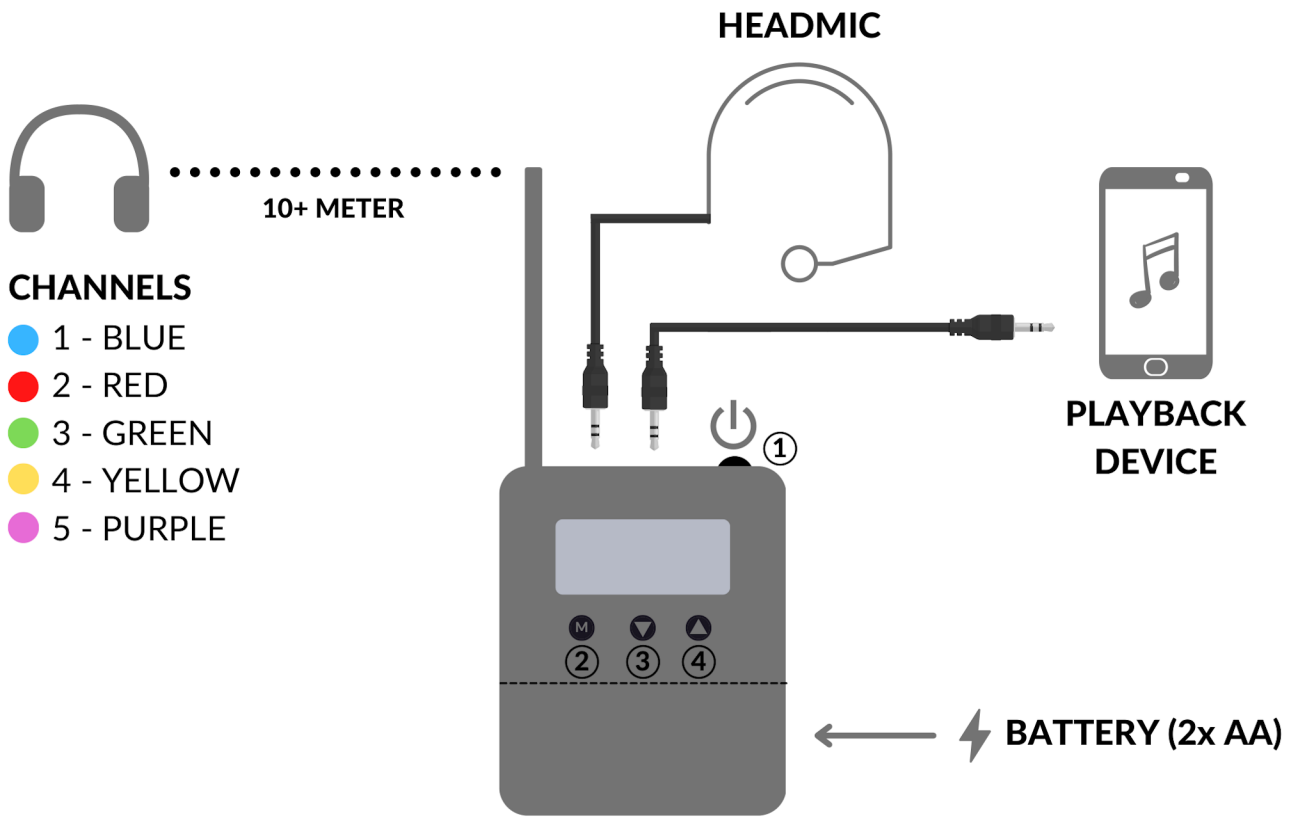

**ON/OFF:** hold ① for 2 sec

## CHANNEL SWITCH:

1. hold ② for 2 sec
2. press ③/④ to select channel 1 to 5
3. press ② to confirm

**MUTE/UNMUTE MICROPHONE:** press ①

## ADJUST MUSIC VOLUME:

1. hold ② for 2 sec
2. press ② once; the display shows "AU" (for audio)
3. press ③/④ to adjust to the desired music volume
4. press ② to confirm

## ADJUST MICROPHONE VOLUME:

1. hold ② for 2 sec
2. press ② twice; the display shows "UV" (for voice)
3. press ③/④ to adjust to the desired microphone volume
4. press ② to confirm