


MS3-2 TRÅDLØS MIKROFON

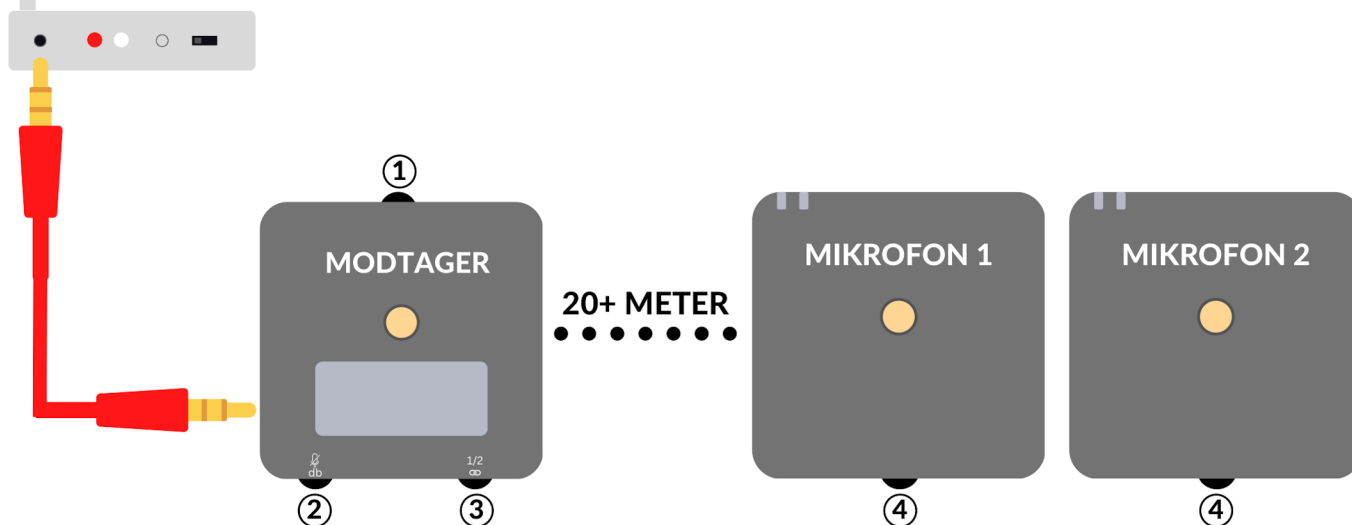

Da indstillingerne ikke passer med Silent udstyret, har vi åbnet æsken og programmeret systemet korrekt (Mode: "Merged"). Du kan ændre indstillingerne via Røde Central softwaren: www.rote.com/microphones/wireless/wirelessgoii

SÆT MS3-2 TIL MT2/MT3 TRANSMITTER: forbind **modtageren** og "Mic" indgangen på transmitteren med det røde minijack kabel

TÆND/SLUK: hold henholdsvis ① og ④ nede i 5 sek

MUTE/UNMUTE VIA MIKROFONEN: tryk ④

MUTE/UNMUTE VIA MODTAGEREN: tryk ③ en gang for at vælge mikrofon 1, eller to gange for at vælge mikrofon 2, og tryk ② kort efterfølgende

JUSTER BALANCEN MELLEEM STEMME OG MUSIK:


1. Skru volumen på dine egne høretelefoner helt op
2. Sæt volumen på afspilleren til ønskede max niveau
3. Tal i mikrofonen og juster niveauet ved at:
 - a. flytte mikrofonens afstand til munden
 - b. tryk ② for at justere mikrofonens 'gain'
4. Juster volumen på dine høretelefoner tilbage til et behageligt niveau

SPLIT/MERGED: hvis kun mikrofon 1 virker, så skal du skifte til "Merged" ved at holde ② og ③ nede i 2 sek; de to grønne bjælker på toppen af skærmen bliver til én grøn bjælke

PAD: hvis du ønsker at en af de to mikrofoner er på et lavere lydniveau, så aktiver 'Pad' ved at vælge mikrofonen med ③, og kort efterfølgende hold ② nede i 2 sek, indtil der bliver vist en lille blå trekant på skærmen; deaktiver på samme måde

BATTERITID: op til 7 timer

MS3-2 WIRELESS MICROPHONE

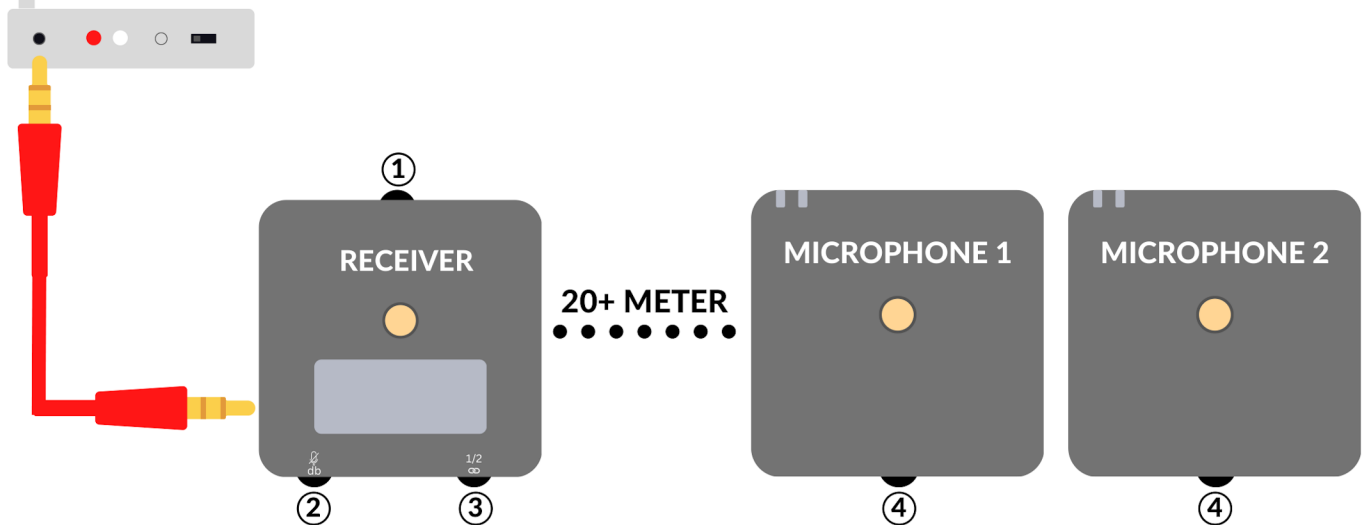

We have opened the box to program the system correctly (Mode: "Merged"), as the default settings don't match with the Silent gear. You can change settings via the Røde Central software: www.rote.com/microphones/wireless/wirelessgoii

CONNECT MS3-2 TO MT2/MT3 TRANSMITTER: plug the short red cable in the minijack output on the **receiver** and the "Mic" input on the transmitter

ON/OFF: hold ① and ④ for respectively 5 sec

MUTE/UNMUTE VIA THE MICROPHONE: press ④

MUTE/UNMUTE VIA THE RECEIVER: press ③ once to select microphone 1, or twice to select microphone 2, and press ② shortly afterwards

ADJUST BALANCE BETWEEN VOICE AND MUSIC:

1. Turn the volume on your headphones all the way up
2. Adjust volume on the playback device to the desired max level
3. Speak into the microphone and adjust the level of the voice by
 - a. changing the distance of the microphone to your mouth
 - b. press ② to adjust the microphone's gain
4. Adjust the volume on your headphones back to a comfortable level

SPLIT/MERGED: if only microphone 1 is working, then switch to Merged mode by holding ② and ③ for 2 sec; the two green bars on top of the screen change to a single green bar

PAD: if you wish that one of the two microphones is on a lower sound level, then activate the 'Pad' by pressing ③ to select the microphone, and shortly afterwards hold ② for 2 sec, until a small blue triangle appears on the screen; deactivate in the same way

BATTERY: up to 7 timer